


Concept Blinds **Direct**

Fitting your 'Z' Lite Blind

1. Brackets will top fix into a lintel or face fix into a frame or wall. Ensure the tab of the bracket is positioned at the back.
2. Offer the blind up to the brackets and ensure you have equal coverage of the fabric over the frame or recess before fixing into the brackets. Valance should face into the room.
3. Tilt the front of the cassette forward and then hook the cassette (second channel in from the valance) into the front of the bracket.
4. Push the headrail cassette upwards and ensure the back of the cassette is locked into the bracket, you should hear a click. If fitting as face fix follow the same procedure.
5. After installation the retention clip must be removed. To remove, simply pull the clip downwards.

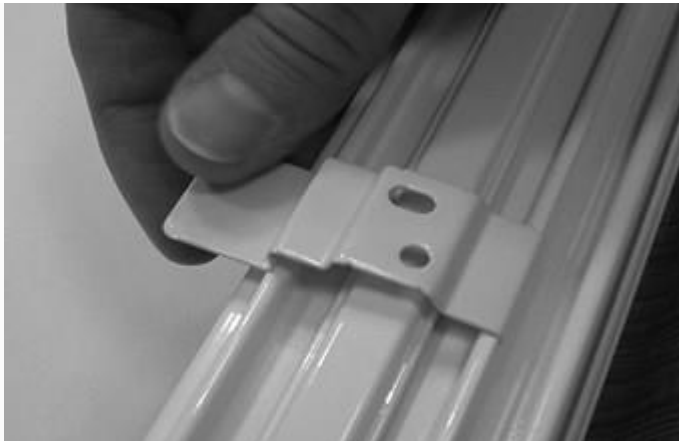


Hook the headrail cassette into the bracket



Headrail cassette fitted into bracket



Retention clip

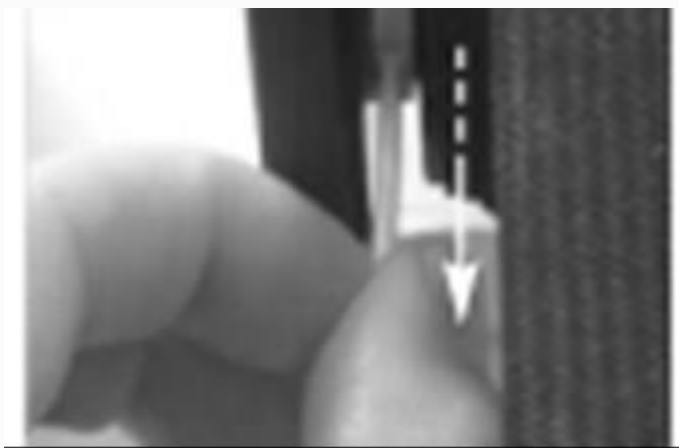

Control Chain

Refer to the separate Child Safety section under 'Health and Safety' for full information on child safety, including instructions on how to fit child safety devices and limitations around chain and cord lengths.

To ensure compliance with child safety legislation, a safety hook must be fitted to an adjacent wall for all Rollers with a continuous chain loop to keep the chain and cord taut and out of reach of children.