

BREAKAWAY CORD CONDENSER

Breakaway cord condenser is pre-fitted to the lift cords so that when a horizontal force is applied to the cords entering the condenser it safely breaks away eliminating any hazardous loops.

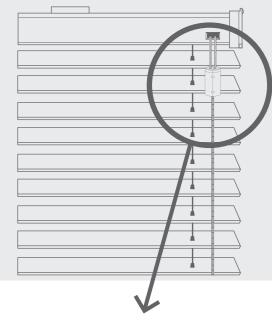

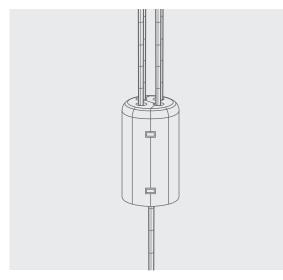

If the cord condenser is pulled apart:

Untangle and untwist cords.


For 2 cords: Press the cord condenser together until it is fully closed.


For 3 cords: Place the loose cord in the opening in one half of the cord condenser and press the cord condenser together until it is fully closed.

For 4 cords: Place one of the loose cords in the opening in one half of the cord condenser, the remaining loose cord in the opening in the other half and press the cord condenser together until it is fully closed.

WOOD VENETIAN BLINDS

If there are any doubts that the cord condenser has not been re-attached correctly it can tested by placing your arm between the cords and pressing downwards. The condenser should break apart with minimal force, if it does not breakaway tie cords out of reach of children and contact a reputable blind company to repair the blind.

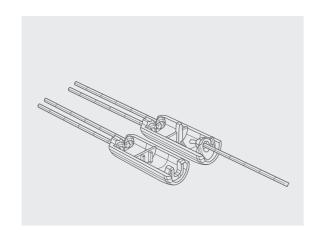


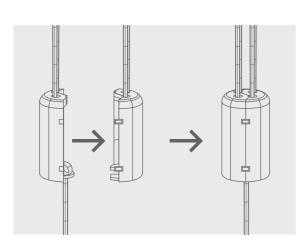

Concept Blinds Direct

OPERATION INSTRUCTIONS

To tilt blind: Pull on required tilt cord tassel to tilt slats to the open/closed position.

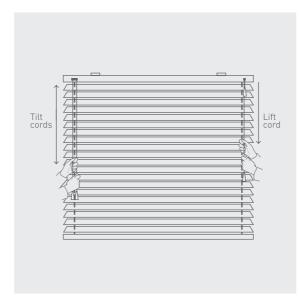

Tilt blind horizontal before raising/lowering to extend the life of the blind.

To lower blind: Move lift cord towards middle of the blind pulling down gently until cord lock releases.

To raise blind: Pull lift cord downward until blind reaches desired height.

To lock cords: Pull lift cord towards the outside of the blind and release. Cord will lock automatically.

MAINTENANCE


The product is maintenance free however we recommend that regular visual checks are completed to ensure that no components have been damaged, which could result in operating difficulties and/or cause a safety risk.

If any maintenance is required we recommend that the work is carried out immediately, by a reputable blind company.







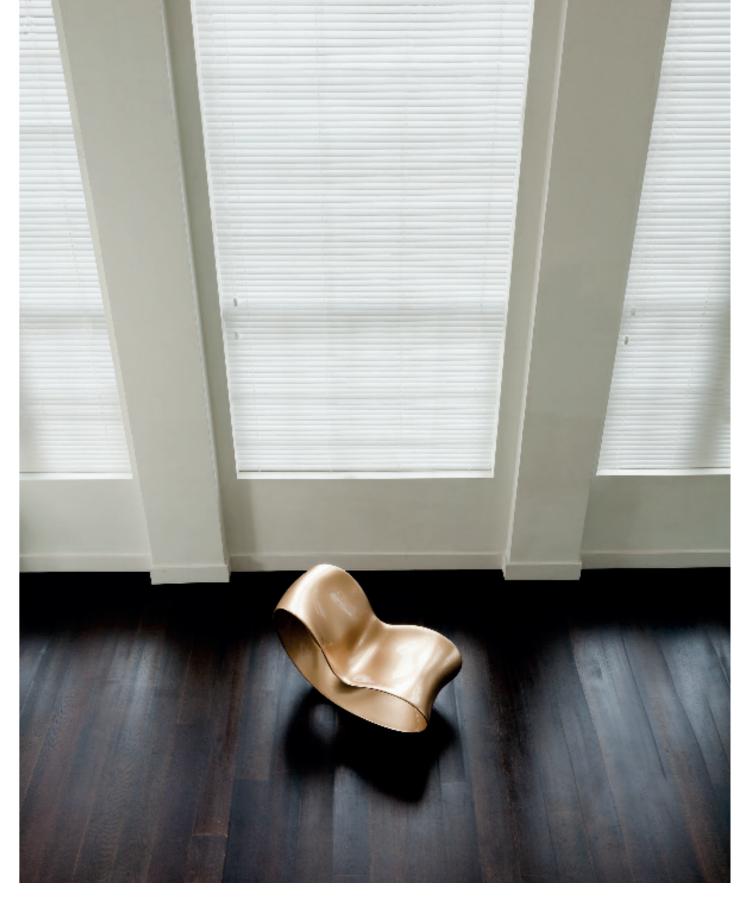

Wood Venetian Blinds

WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.



FITTING INSTRUCTIONS: WOOD VENETIAN BLINDS

WOOD VENETIAN ITEM LIST

Brackets



Safety device



Wood screw for bracket -(2 per bracket) 2 screws for safety cleat. 4 screws for hold down bracket



Hold down brackets



TOOLS REQUIRED

Screw driver





Tape measure Pencil






OUTSIDE RECESS

If the blind is to be fitted outside the window ensure that measurement C is the same. Follow instructions for FACE FIXING. To calculate C=(A-B)/2.

INSIDE RECESS

TOP FIX to the lintel or FACE FIX brackets to the window frame.

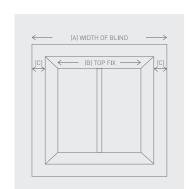

Children can strangle

if a safety device is

not installed. Always

use a safety device to keep cords and chains out of reach

of children.

The installation height of this blind must not be less than 1500mm

TOP FIXING

from the floor.

STEP 2


Measure and mark the distance between the wall and the back of the bracket, allowing for obstructions like handles that protrude into the recess area. The brackets should be positioned 6mm wider than the blind at each end. Hold each bracket into place and mark the hole positions. Fit each bracket using the screws provided. Please ensure fixings are suitable for the wall/surface to which you are mounting the brackets.

FACE FIXING

The brackets should be positioned 6mm wider than the blind at each end. Hold each bracket into place and mark the hole positions. Fit each bracket using the screws provided. Please ensure fixings are suitable for the wall/surface to which you are mounting the brackets.

SIDE FIXING

Hold each bracket into place and mark the hole positions. Fit each bracket using the screws provided. Please ensure fixings are suitable for the wall/surface to which you are mounting the brackets.

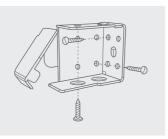

CENTRE SUPPORT BRACKET

For larger width blinds a centre support bracket is required. Align the top of the centre support bracket with the top of the mounting bracket before installation. Install with the bigger flap of the centre support bracket on the top equally spaced along the width of the headrail and clear of the slat ladder positions.



Open the gate of the box brackets and slide the headrail into position then snap the brackets closed.



Number of ladders	End fix brackets	Centre support brackets (supplied)
2	2	0
3	2	1
4	2	2
5	2	3
6	2	4


SWIVEL BRACKET (OPTIONAL)

Swivel brackets can be face or top fixed. One swivel bracket should be attached adjacent to each ladder without interfering with the internal components. Open the swivel arm feed the headrail into the bracket as shown and lock the swivel arm closed.



HOLD DOWN BRACKET (OPTIONAL)

Hold down brackets: Using two small screws, screw hold down bracket to window facing or wall. Snap bracket pin ends into the hole at bottom rail end.

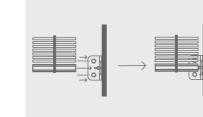


ATTACHING THE VALANCE

DUAL LOCK

Remove the plastic from the dual lock positioned on the headrail. Place the valance in the required position and firmly press the valance against the dual lock for 5 seconds to secure the valance.



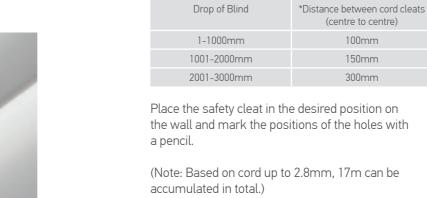

STEP 5

the lift side.

SAFETY DEVICE

You are supplied with two sets of cleats, one set

Cord safety cleat - The safety cleat shall be installed

as close to the headrail as possible and in all cases

The Cord must be fully accumulated around the

Use the table below to determine the distance


required between the cleats to fully accumulate the

safety cleat(s) when the blind is not in use.

not less than 1500mm from the floor.


cords when the blind is fully raised.

should be fitted to the tilt side and the other to

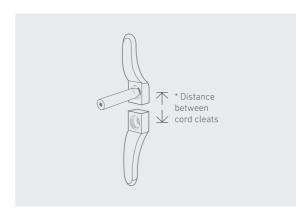

Mark the hole positions and drill as required.

Use the screws provided to attach the safety cleat to the wall.

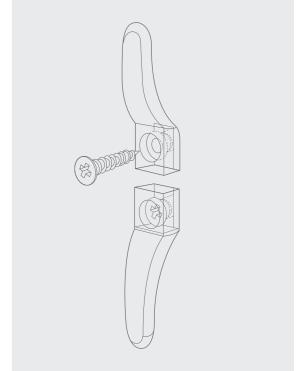

Wrap the cords around the cord cleats in a figure of 8.

When the cords are fully accumulated ensure they are secure so when any cord is pulled no excess cord is released.

